




ערכת הארכה לפגולה

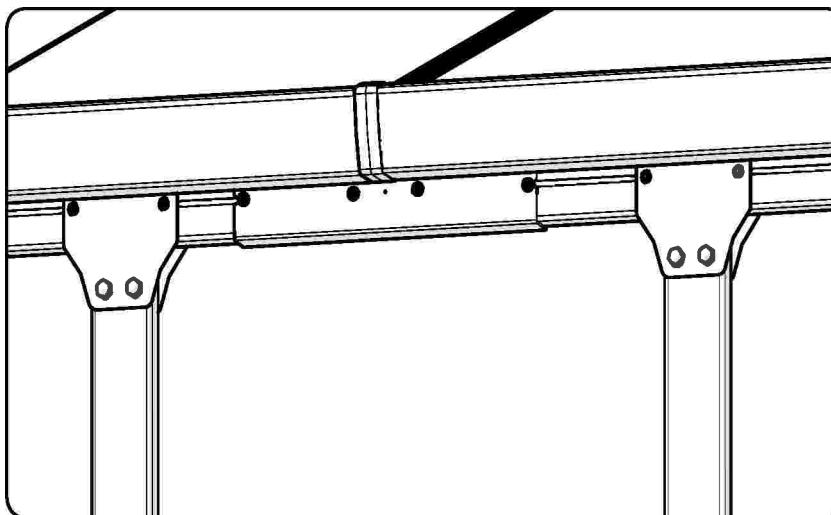



שירות לקוחות



customer.service@palram.com



04-848-6816

חשיבות

נא לקרוא בקפידה את הוראות ההרכבה לפני תחילת הרכבת המוצר.
נא לבצע את שלבי ההרכבה בסדר המוצג בהוראות אלה.
נא לשמור את הוראות ההרכבה במקום בטוח לשימוש עתידי.



בטיחות:

- חלקים מסוימים יש קצוות מתקת - נא לטפל בחלקים אלו בזיהירות הנדרשת.**
- נא להשתמש בככופות עבודה, משקפי מגן וביגוד אורך במשר כל ההרכבה וביצוע פעולות תחזוקה.**
- כדי למנוע חבלה ופיציעות, אין לאפשר לילדים לשחק בקרבת החממה בזמן ההרכבה.**

לפני ההרכבה:

- מוצר זה מתאים לתוחום CISCO הפטוי של פלרטם.**
- מומלץ מאד להיעזר באדם נוסף בשלבים מסוימים של ההרכבה.**
- מיין את החלקים ובודק אוטם מול רשימת התכולה של החלקים**
- לפוי התקנה, יש לפרק חלק CISCO הפטוי, מומלץ לשמרם אוטם במקום בטוח לצרכים עתידיים.**
- מידי פעם מומלץ לבדוק את מרכיבי הקיט כדי לוודא שהוא יציב.**
- הערה: השתמש אך ורק בחלקים המופיעים ברשימה החלקים התואמים את כיבוי הפטוי שלך (7999 Uber סירה ו-7029 Uber פריה / טוסקני), יתכן וחלק מהחלקים יהיו מיותרים. מוצר זה מתאים לחממות פלרטם השקופות וכפולות הקיר (לא כולל חمامות Snap&Grow).**

במהלך ההרכבה:

במידה וכבר יש ברשותך CISCO פטוי של פלרטם, יש צורך לפרק חלקים כפי שזו מתואר בשלב 1 בחומרת הוראות ההרכבה של הקיט.

אפשרות מס' 1.

שלב 1 ב' סירה: ב כדי לבצע שלב זה, יש להסיר את ראש המחרב.
שלב 4: בחר באפשרות מס' 1 אם אתה רוצה להרכיב את עמודי התמיכה במצב שונה מהמצג הממוצע (שימוש בחלק #7431). אני המשך במצב זה עד לשלב 6 (דילג על שלבים 7 ו-8) והמשך לשלב מס' 9.

שלב 6: אני וודא כי המרחק בין העמודים וחיבור הקיט לכיסוי הפטוי המקורי אינו עולה על 60 ס"מ.

אפשרות מס' 2

שלב 4: בחר באפשרות מס' 2 אם קביעת המיקום של עמודי ההרכבה אינה רלוונטי, אני מלא אחר הוראות שלב 7.

שלב 7: קיימת אפשרות להשתמש בעמודים הקיימים בכך לתמוך בחיבור שבין ההרכבה החדשה וכיסוי הפטוי המקורי.

במקרה זה אנא שומר על העמוד הנוסף לשימוש עתידי או השלים בצורה הולמת.

שלב 11: הידוק האומיים נעשה מבפנים.

שים לב: בעת הרכבת הקיט, היישור מול CISCO הפטוי המקורי הינו חיוני.



הדק את כל הברגים לאחר סיום ההרכבה.



Please read these instructions carefully before you start to assemble this product.

Please carry out the steps in the order set out in these instructions. Keep these instructions in a safe place for future reference.



When encountering the information icon, please refer to the relevant assembly step for additional comments and assistance.



This icon indicates that the installer should be inside the product.

Safety

- Some parts may have sharp edges. Please be careful when handling components.
- Always wear gloves, eye protection, and long sleeves when assembling or performing any maintenance on your product.
- To prevent injuries, do not allow children to play under the product during assembly.

Before Assembly

- This product is suitable for Palram's Patio Covers range
- It is highly recommended to be assisted by a second person in some steps.
- Sort the parts and check according to the contents parts list.
- Prior to the installation, several parts from the Patio cover needs to be dismantle, it is recommend to keep them in a safe place for future need.
- Periodically check the kit components to assure that it remains stable.
- Note: Use only the parts registered in the content list, which are compatible with your Patio Cover (7999 for Sierra & 7029 for Feria / Tuscany), some parts may be surplus.

During Assembly

In case that you already own Palram Patio cover it is necessary to dismantle parts as described in **Step 1** in the kit assembly manual.

Option No. 1

Step 1b Sierra: In order to perform this stage, the gutter head must be removed. **Step 4:** Select option no. 1 if you would like to mount the supporting poles in different position than the merged position (using part #7431). Please continue from this position until **step 6**. (skip step 7&8) continue to step **no. 9**.

Step 6: Please make sure that distance from the poles and the kit connection to original patio cover does not exceed 60 cm.

Option No. 2

Step 4: Select option no. 2 if the setting position of the mounting poles is not relevant. Please follow from **step 7**.

Step 7: It is optional to use the existing pole to support the connection between the new extension and the original patio cover.





In such a case please store the extra pole for future use or dispose properly.

Step 11: Tightening of the bolts is done from inside.






Pay attention: while installing the kit, alignment with original patio cover is important.

Tighten all screws when completing assembly.






Contents

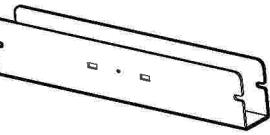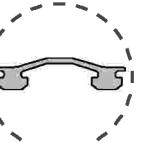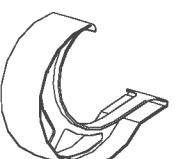Item		Qty.	Item		Qty.
8192		9 (+1)	7431		1
461		4 (+1)	7334		1
466		13 (+1)	7039		2
7335		1 (+1)	7440	 	1
8119		1			
7999	for SIERRA 	1			

1

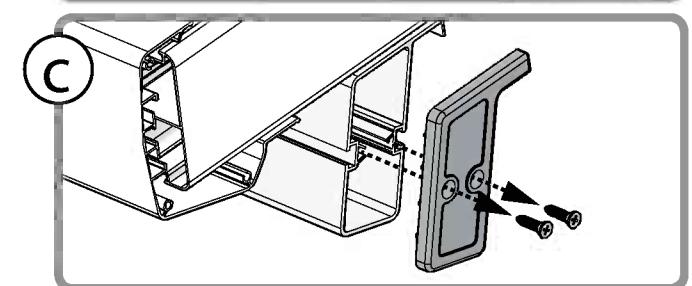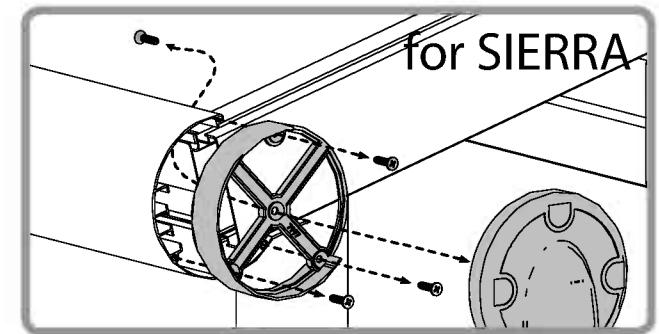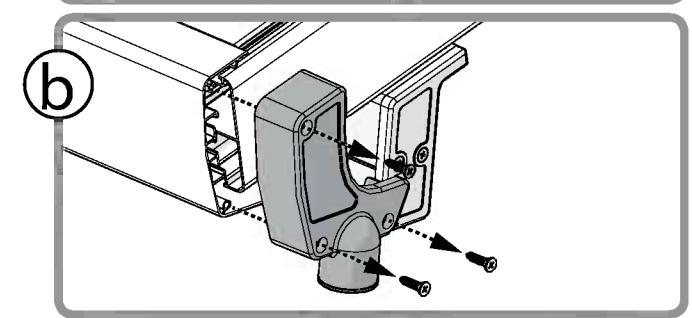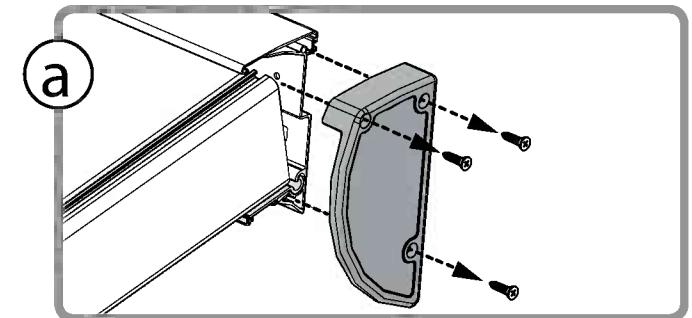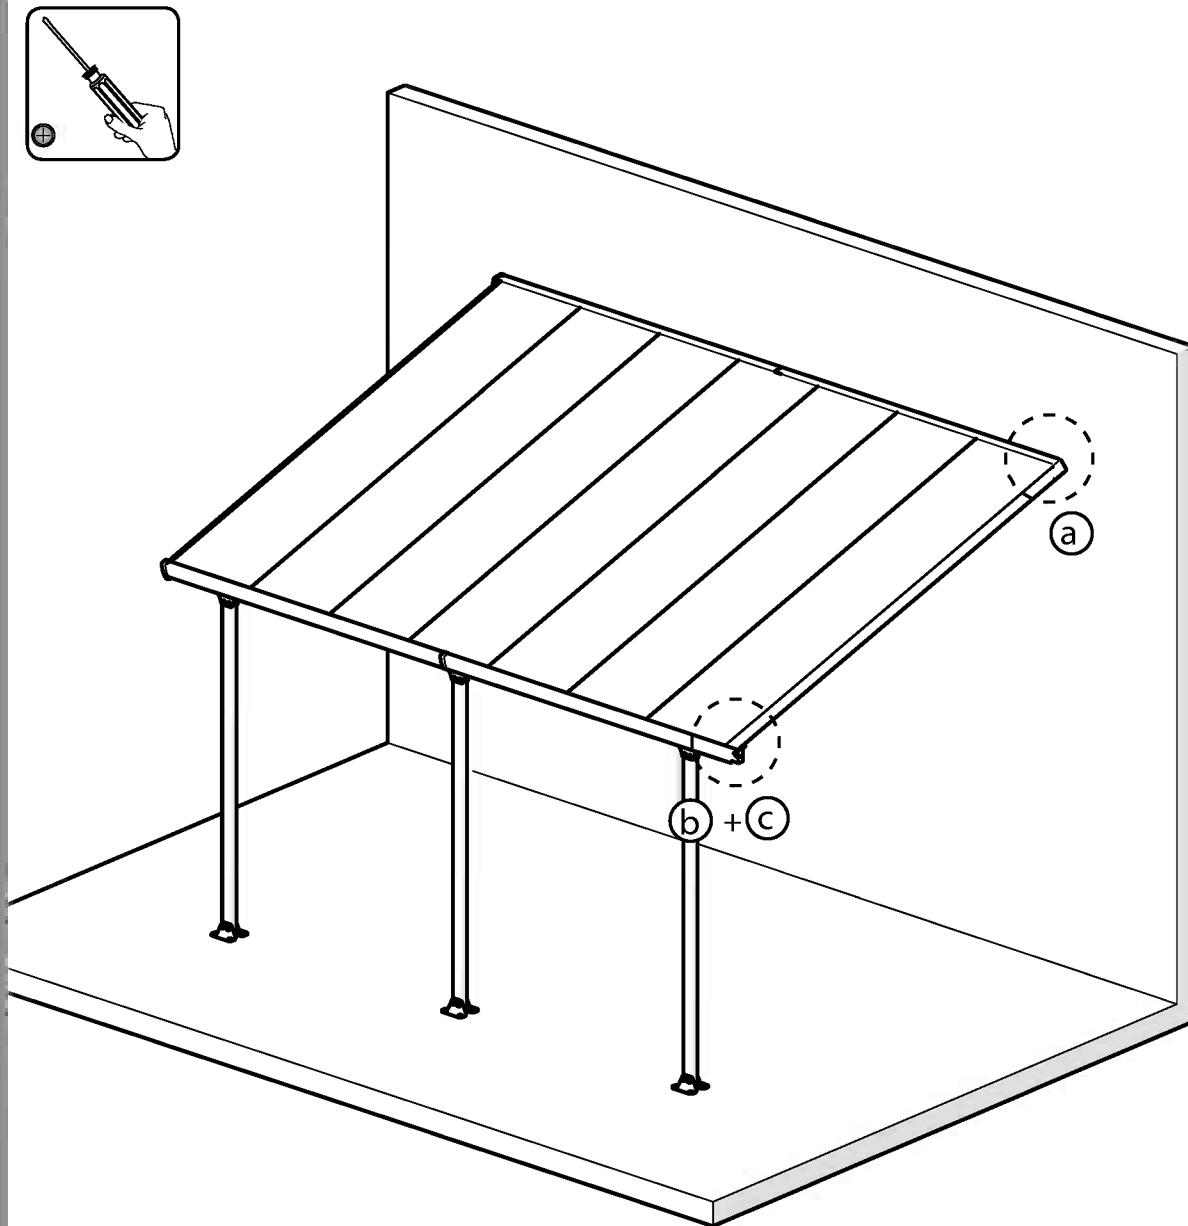

2

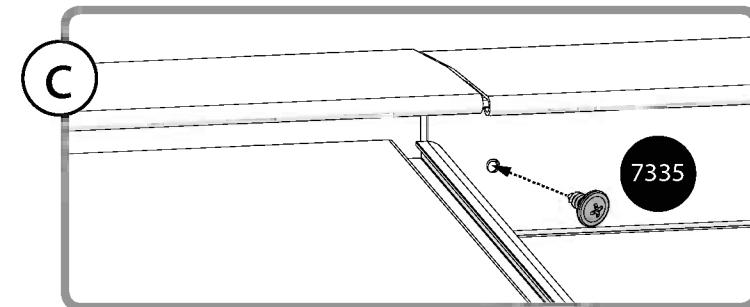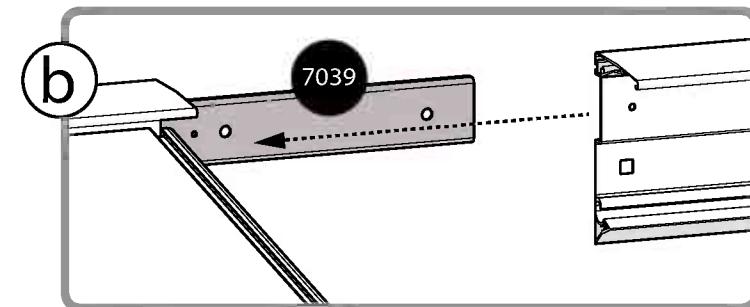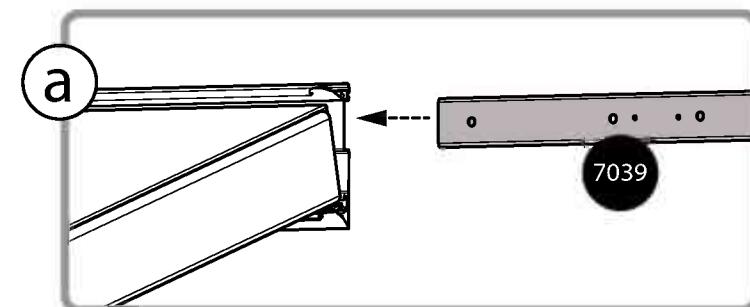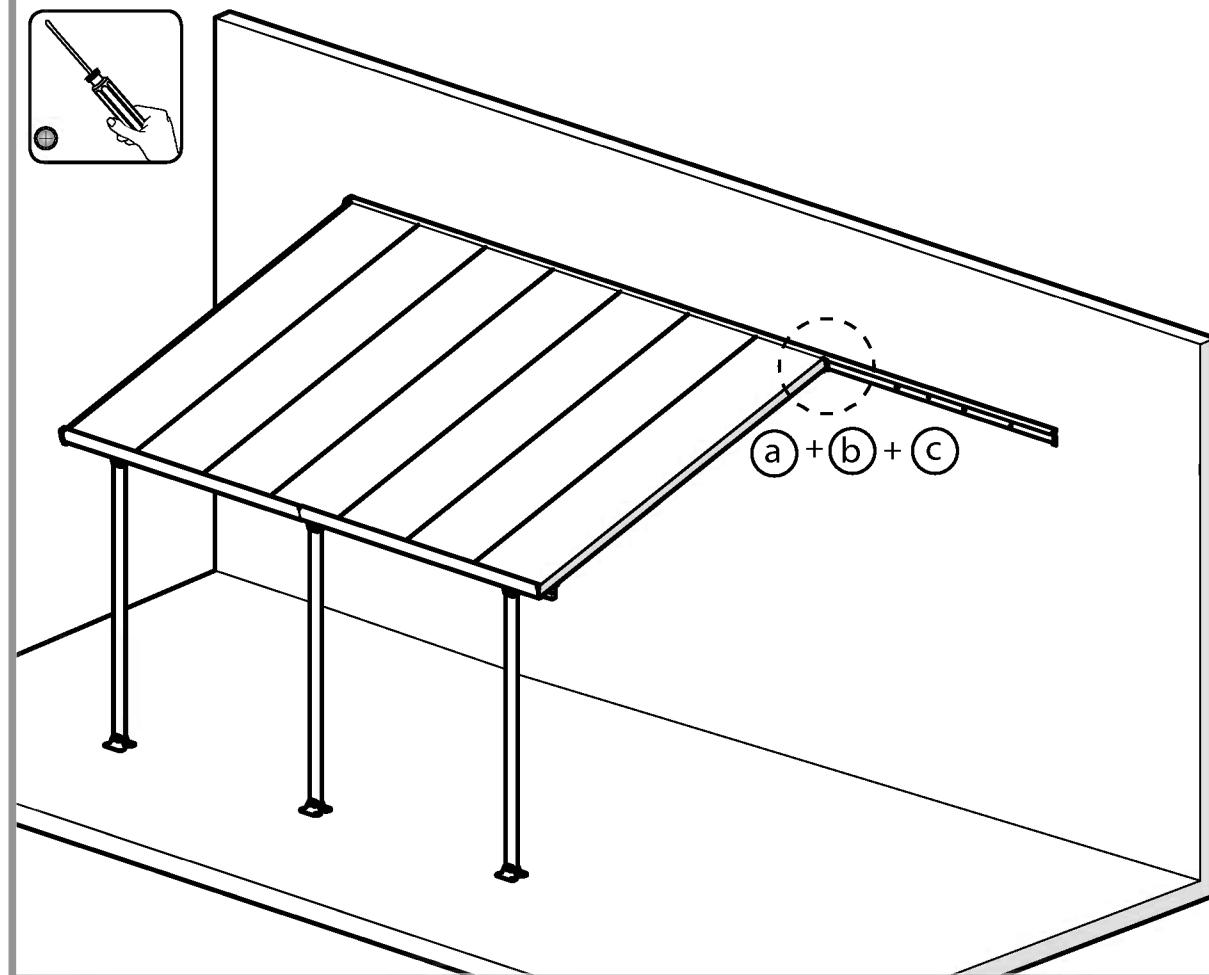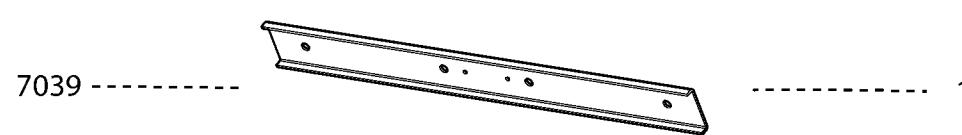

3






7334 ----- 1



8192 ----- 1




466 ----- 1

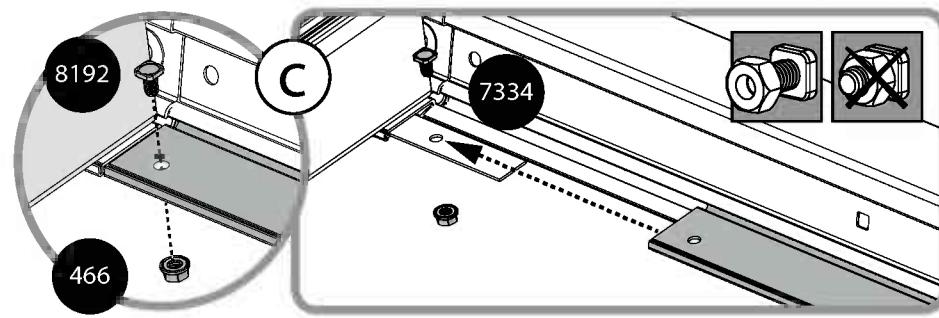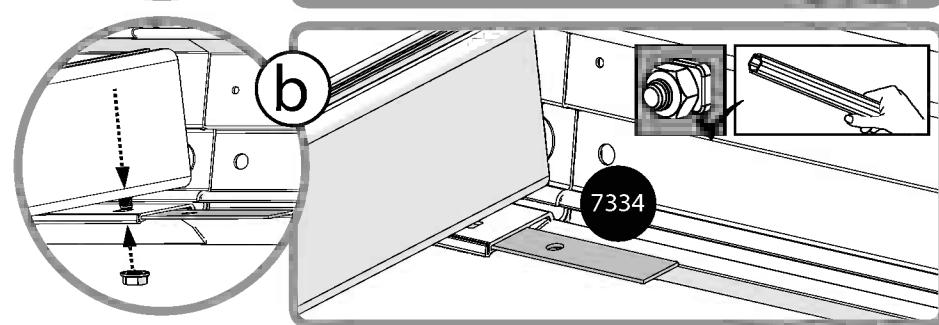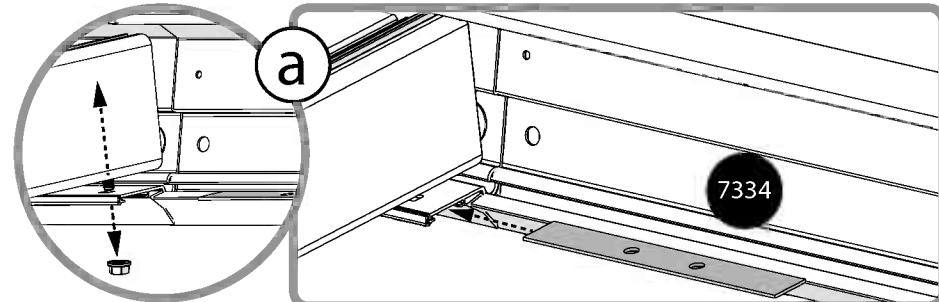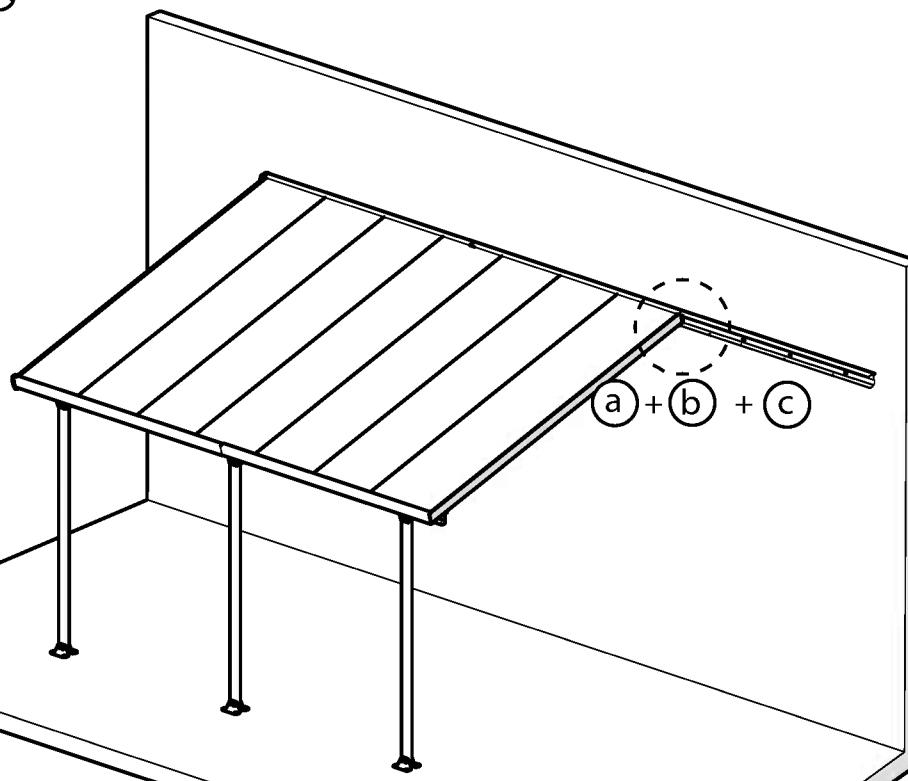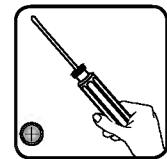

4


i

Option 1

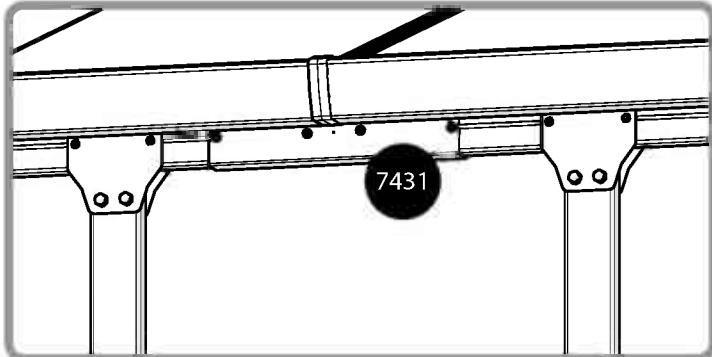


OR



Option 2

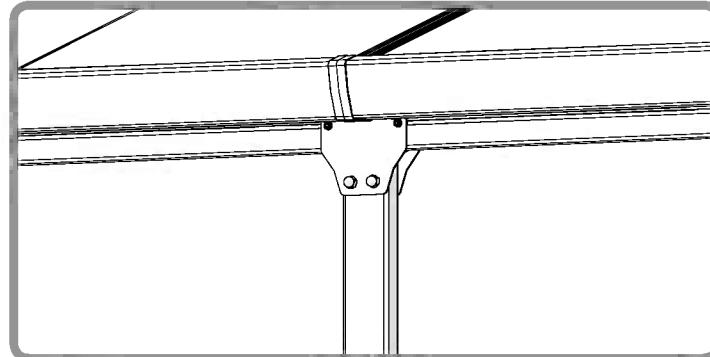

for SIERRA



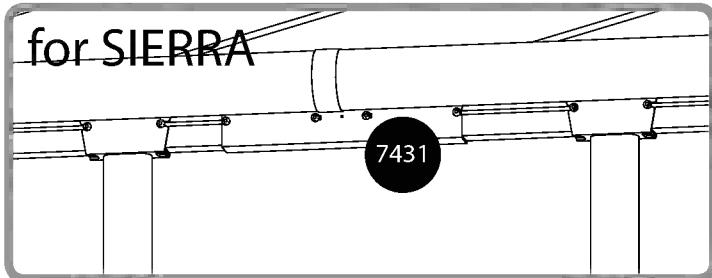


for SIERRA

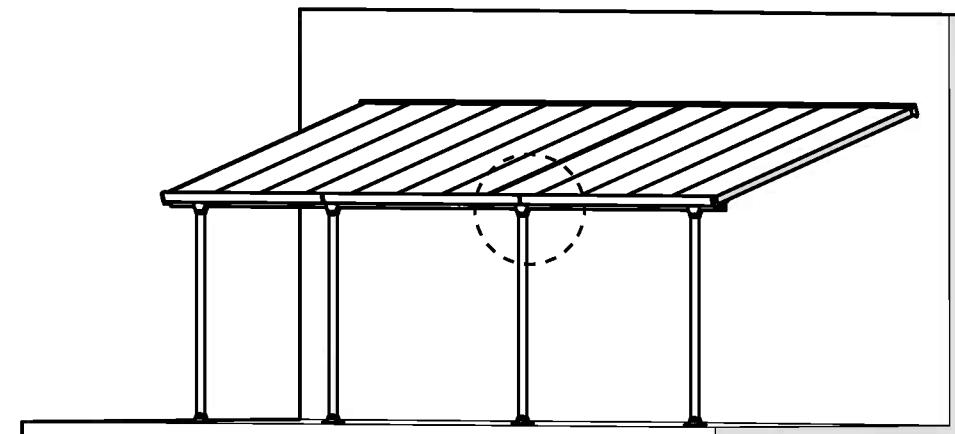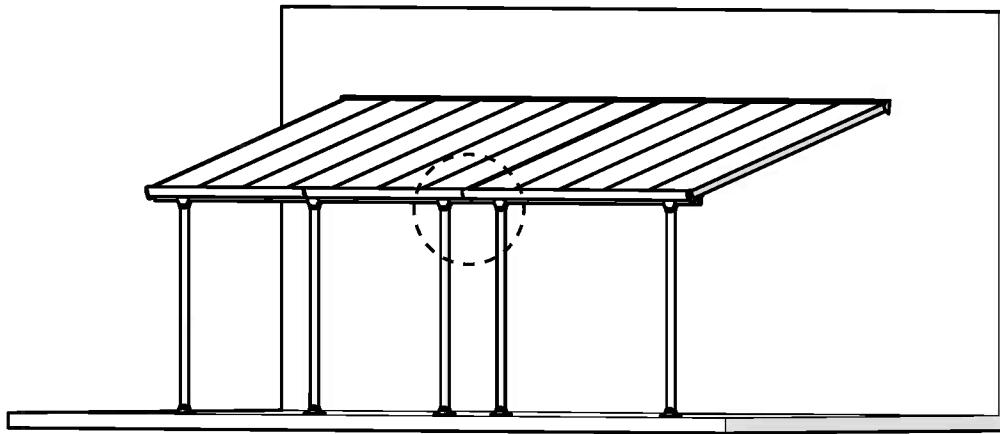

5

Option 1

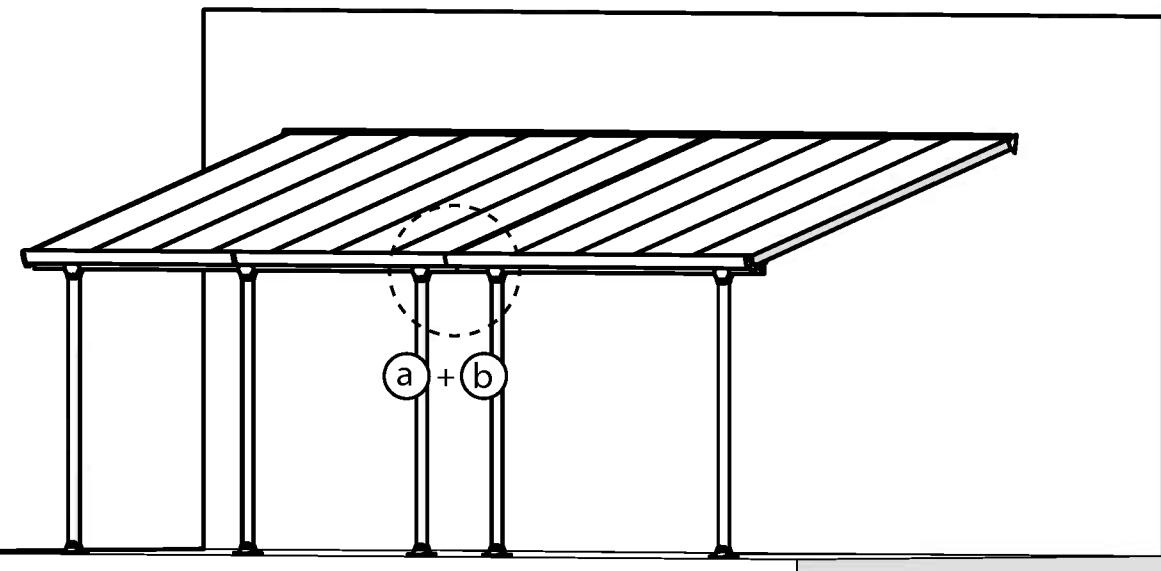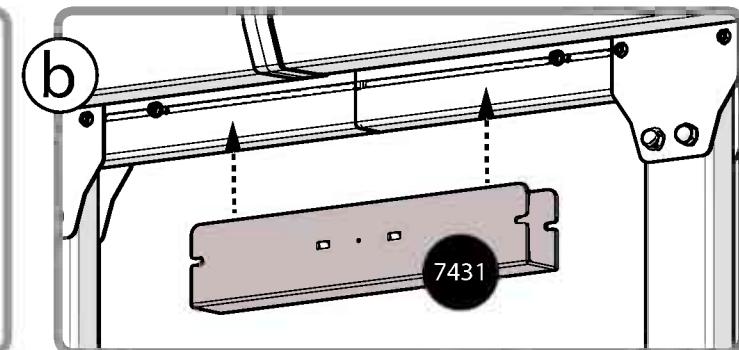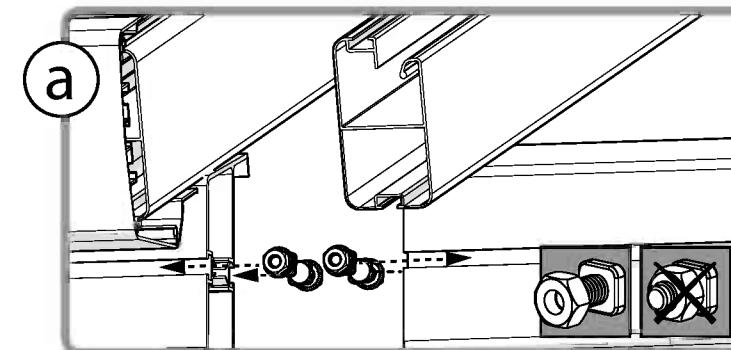


6

Option 1

461 ----- 4




466 ----- 4

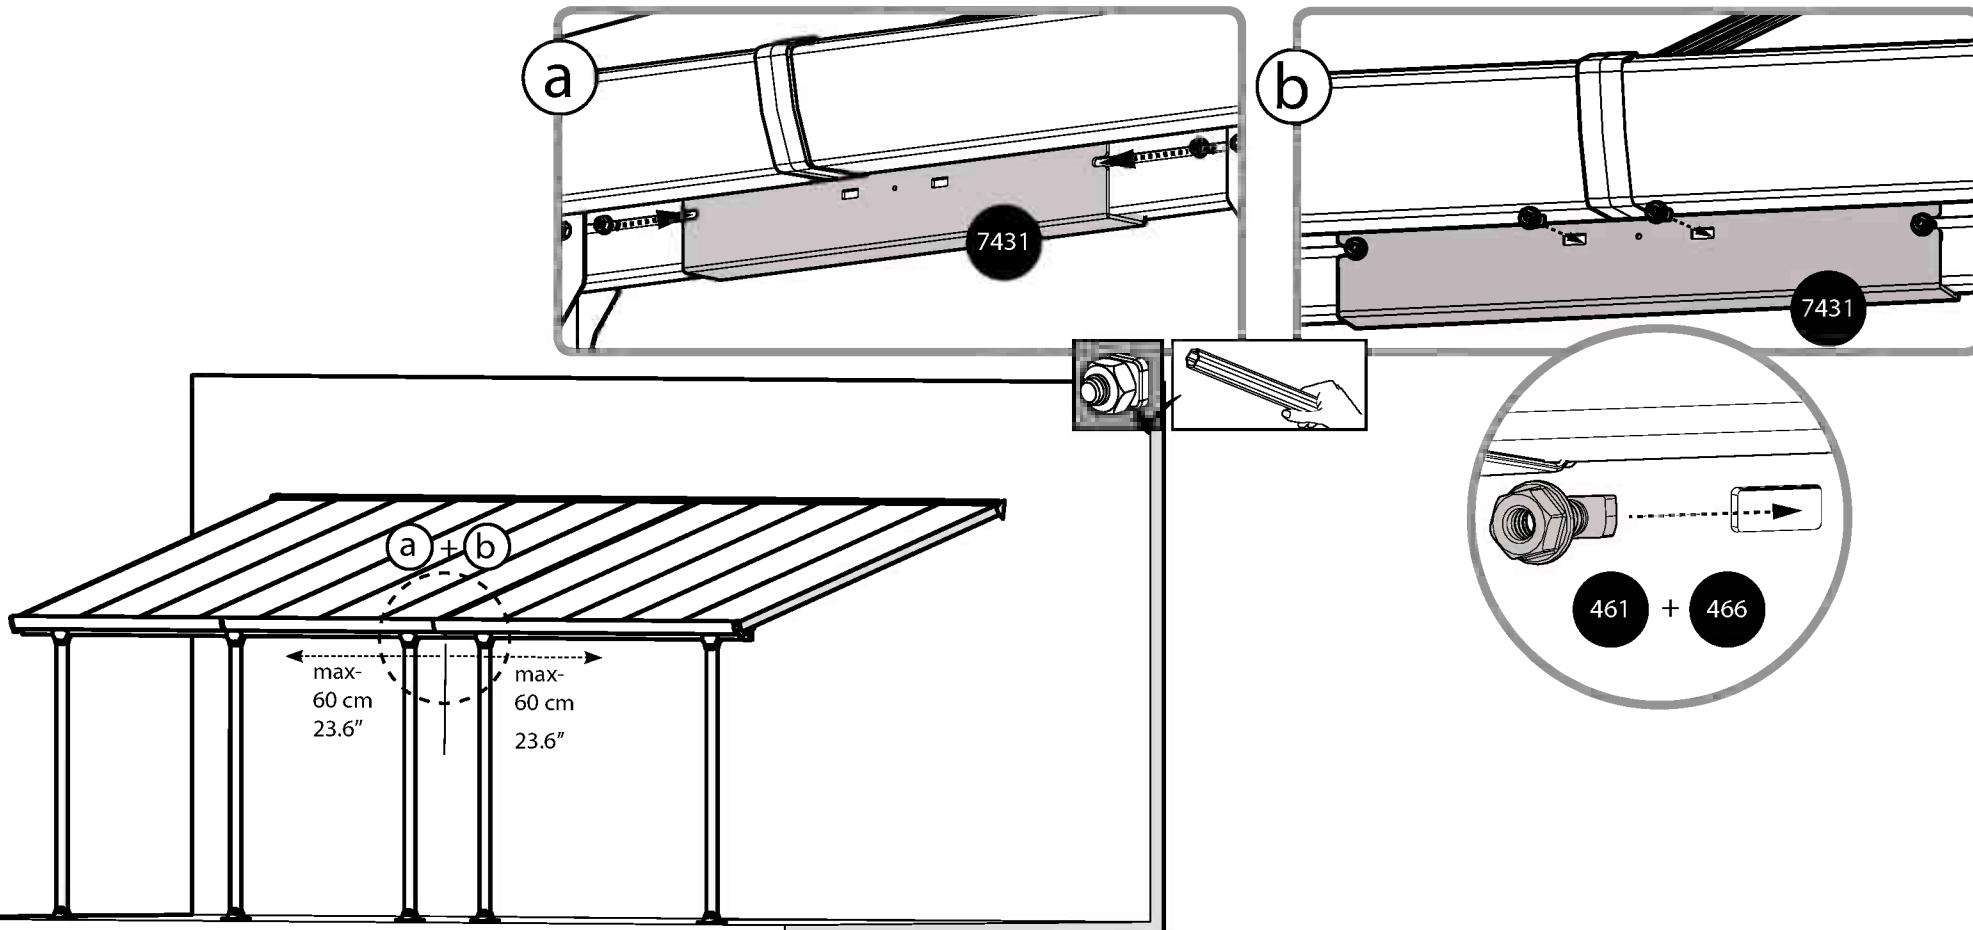

7





Option 2

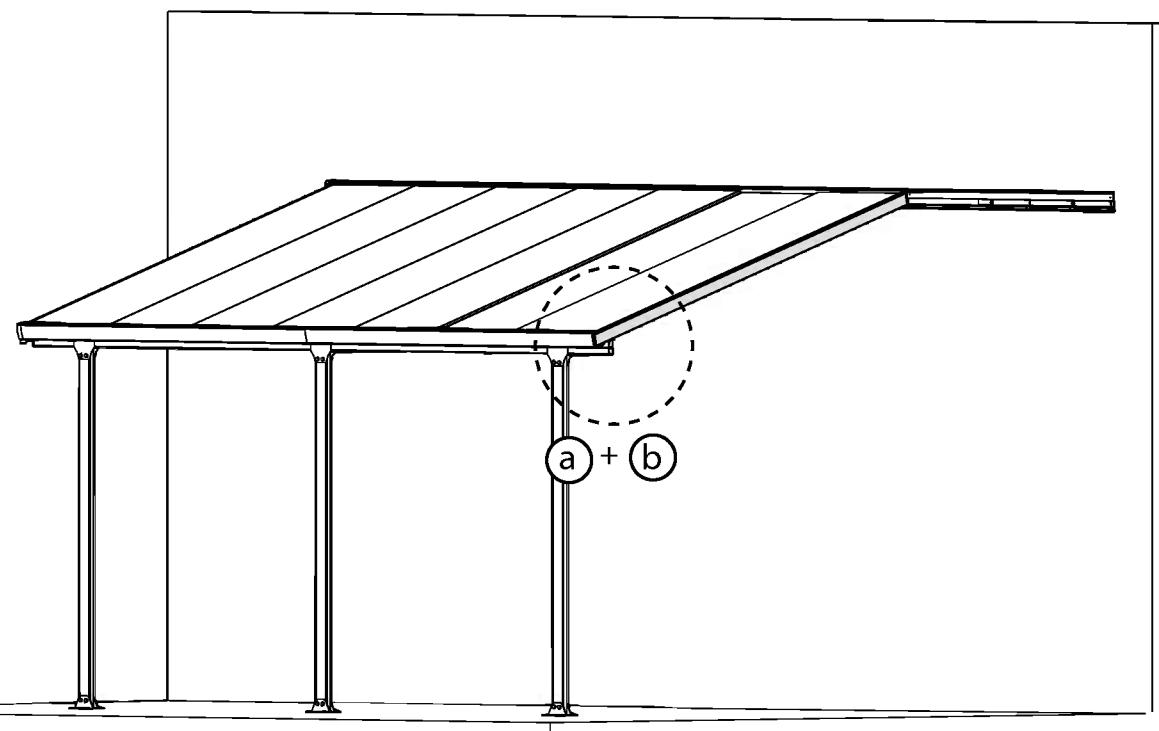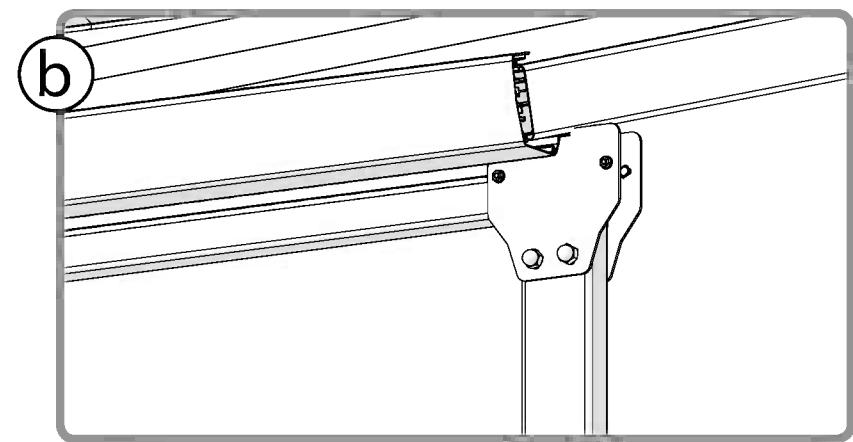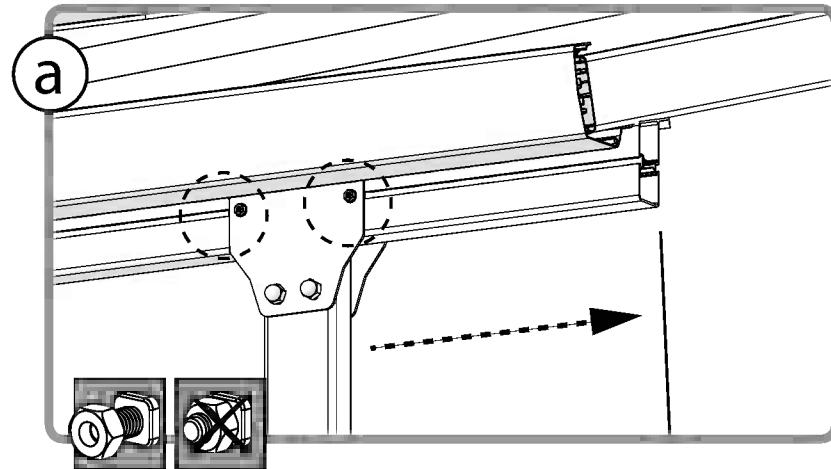


8

Option 2

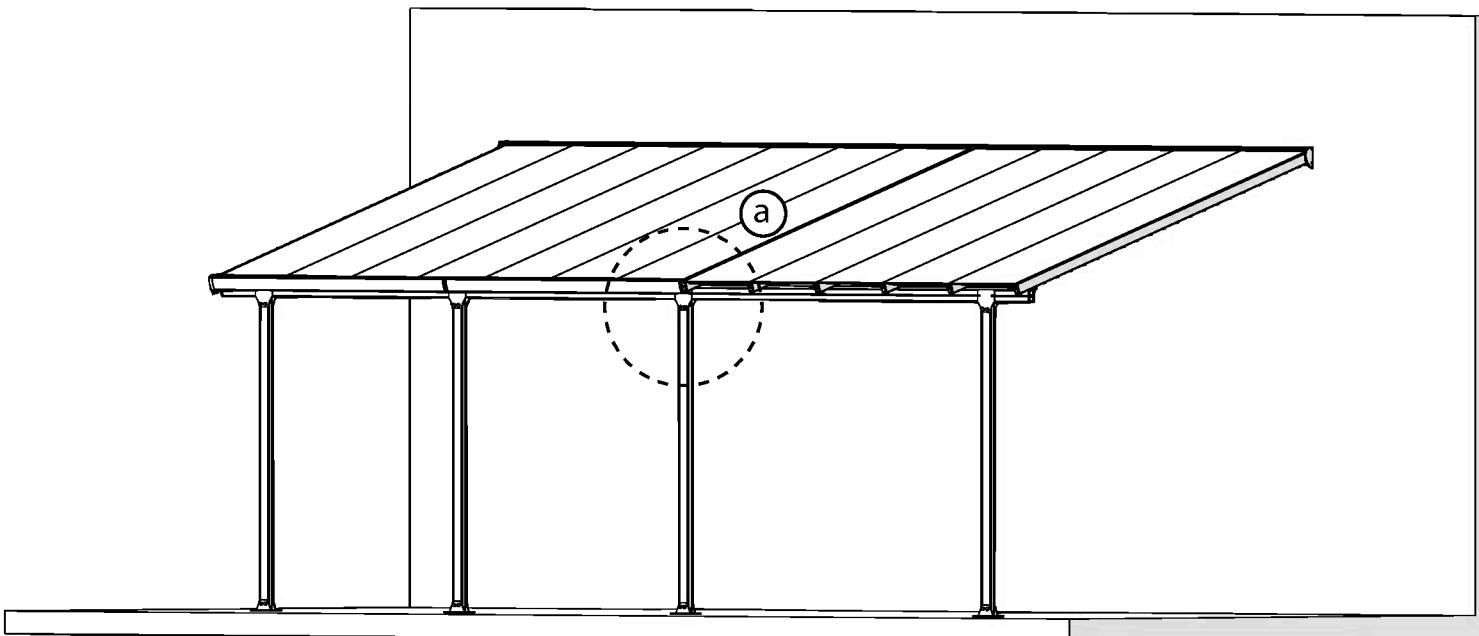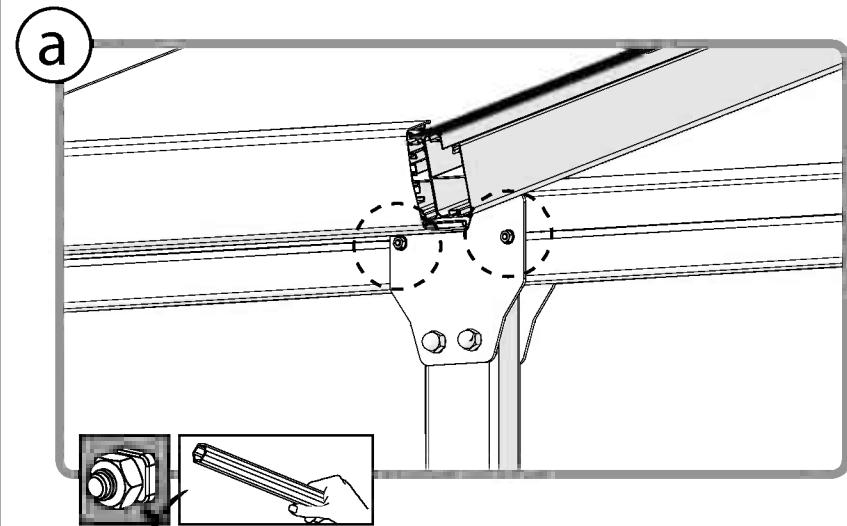









9

Options 1+2

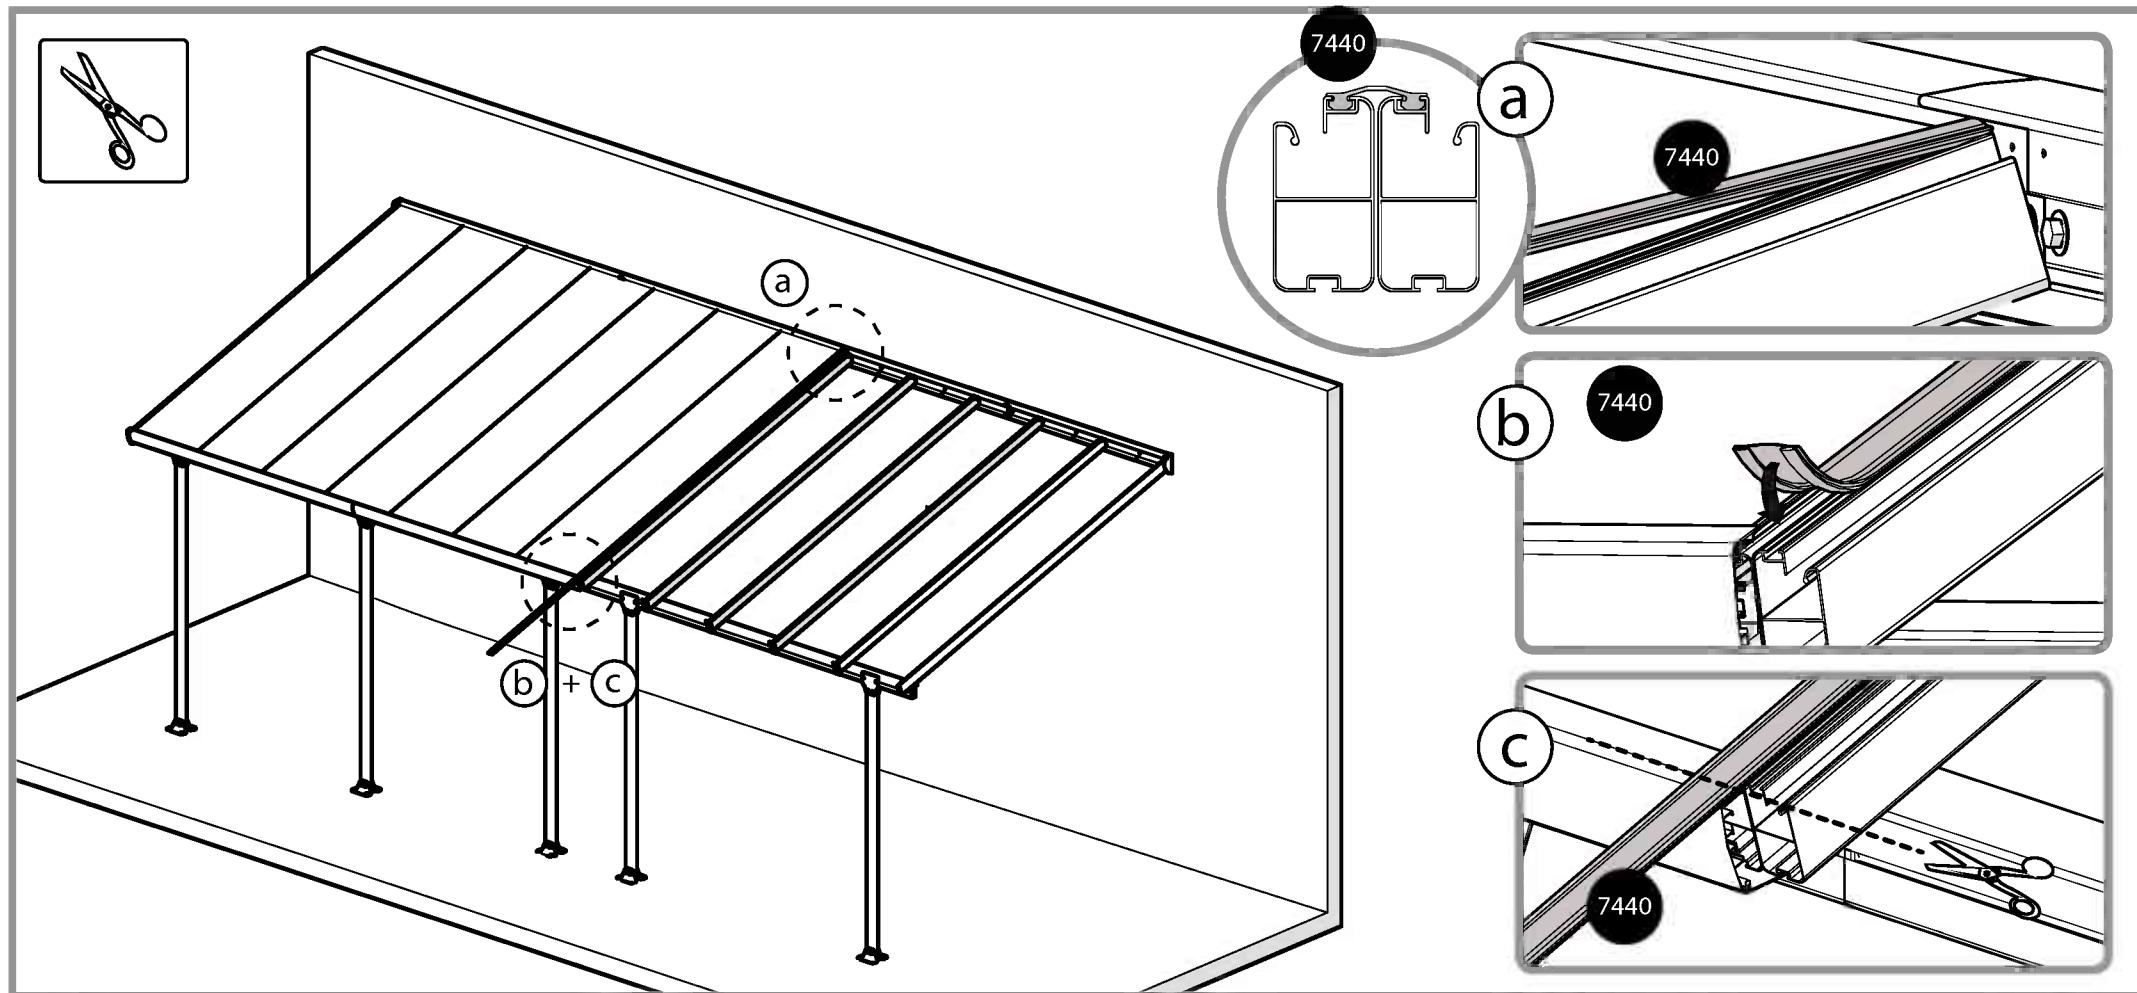

10

Options 1+2

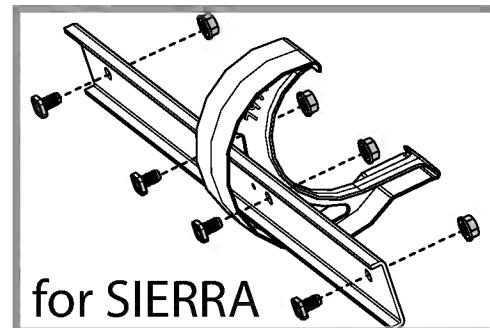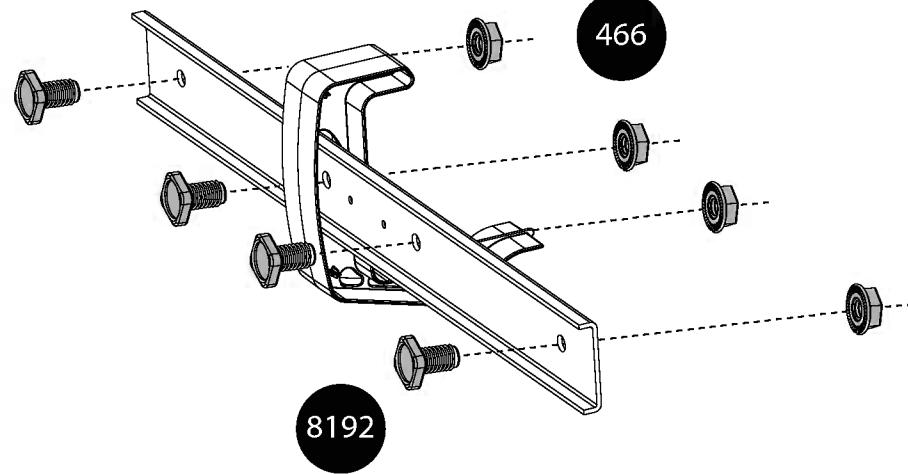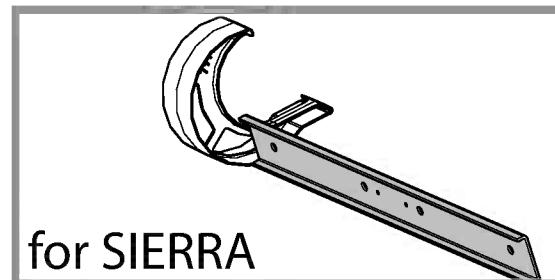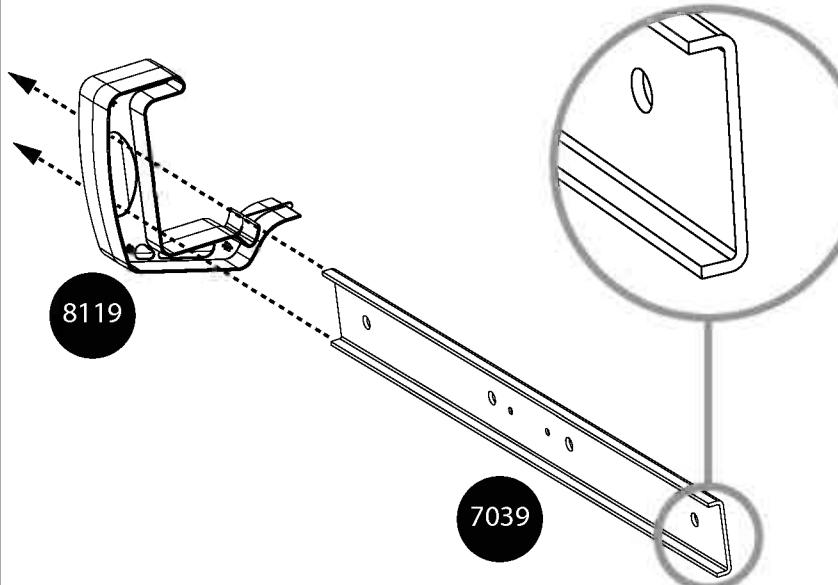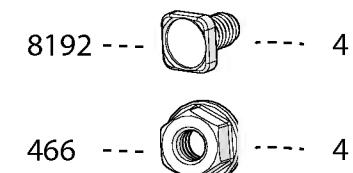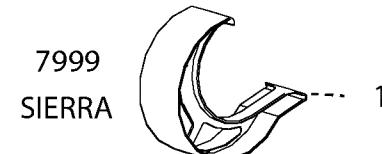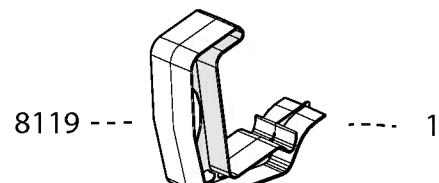

11



Options 1+2

